
DUTCHESS BAKERS' MACHINERY COMPANY SUPERIOR, WISCONSIN – USA

It is recommended to replace both springs.

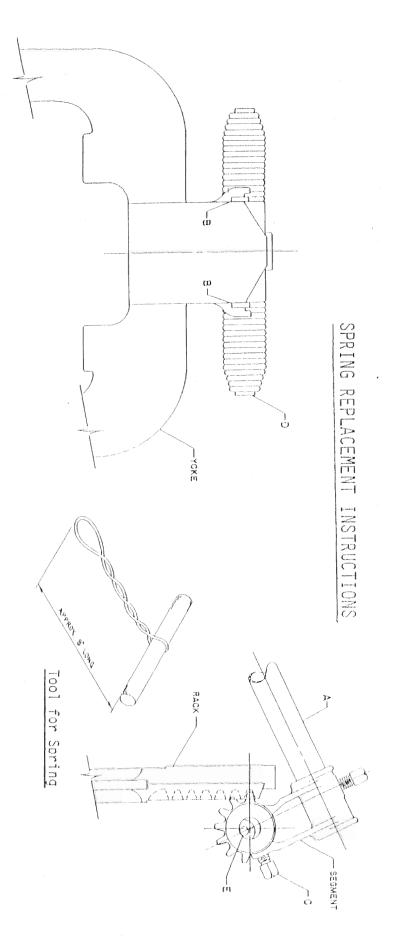

BEFORE ATTEMPTING TO INSTALL OR REMOVE THE TORSION SPRING, YOU MUST FIRST BLOCK THE HEAD IN ITS UPPERMOST POSITION. THIS CAN BE ACHIEVED BY PLACING THE DOUGH PAN UPSIDE DOWN,

Removal:

Lift tail of spring out of notch "B" of yoke with a screw driver or similar tool

Installation:

- Place small loop of Spring to full depth in notch "E" at end of Shaft "D", and while holding Spring in place, (by pressing a block of wood against end) replace tail of Spring in notch "B" of Yoke.
- As a tool for replacing tail of Spring in notch "B", a loop of strong wire and a wood handle may be used . . . see sketch